


HOW TO CHOOSE YOUR DESTRAFIER

	E36202	E48202	E56002	E60002
HEIGHT (m)	L (m)	L (m)	L (m)	L (m)
3.0	10.5	12.5		
4.0	11.2	12.8	14.5	
6.0	12.5	13.5	18.5	21.5
9.0			16.5	19.5
12.0			12.5	18.1
14.0			10.5	16.5


SIDE VIEW OF AN INSTALLATION

blades to floor
(ceiling to blades is 0.4m)

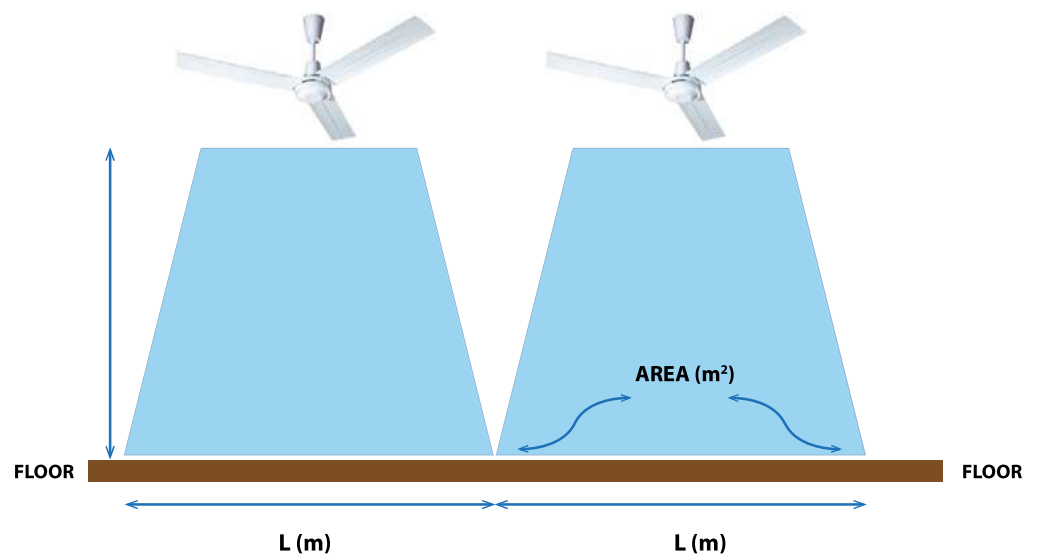

	E36202	E48202	E56002	E60002
HEIGHT (m)	AREA (m²)	AREA (m²)	AREA (m²)	AREA (m²)
3.0	110	156		
4.0	126	165	210	
6.0	156	182	342	462
9.0			272	380
12.0			156	328
14.0			110	272

EXAMPLE OF DISTRIBUTION OF THE MASTER DESTRAFIER/ VENTILATORS IN A FACTORY

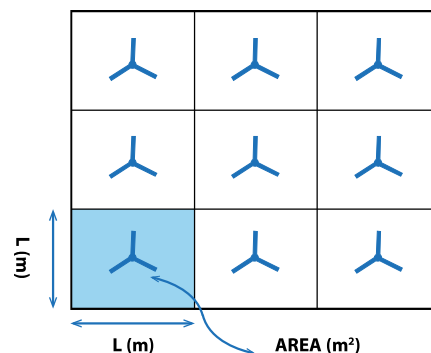

Master destratifiers work up to 14m in height.